


EUREKA

Vacuum Cleaner Owner's Guide Household Type 1040 Series

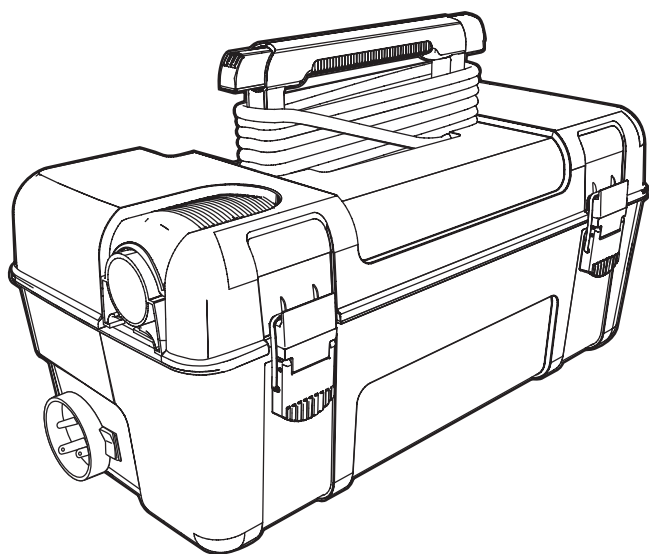

IMPORTANT

Do not return this product to the store.

For assembly problems or questions contact: Eureka's Customer Service Division toll free at 1-800-282-2886*, 8 a.m. to 7:30 p.m., Central Standard Time, Monday through Friday, 10:00 a.m. to 6:30 p.m., Saturday

For replacement of broken or missing items to be shipped direct to you, call 1-800-438-7352*, 8 a.m. to 4:45 p.m., Central Standard Time, Monday through Friday.

***En Mexico llame al 5670-6169**

2-5

IMPORTANT INFORMATION

6

QUICK REFERENCE

7

HOW TO USE

8

ROUTINE MAINTENANCE

Dust Cup

Pre-Motor Filter

Storage

9

PROBLEM SOLVING

Guide

11

CUSTOMER ORDER FORM

12

WARRANTY

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury.

- Do not use on wet surfaces. Do not expose to rain, store indoors in a cool, dry place.
- **Do not leave vacuum cleaner when plugged in.** Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Use only with cordset provided.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Connect to a properly grounded outlet only. (Refer to Grounding Instructions).
- Do not exceed combined electrical rating of cordset (13 amps). Vacuum (6 amps), plus attachment (7 amps maximum if vacuum is running).
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands or operate without shoes.
- Cover unused receptacle when not in use, cover provided on cord.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot fireplace or barbeque ashes. Live sparks or embers could start a fire in waste material inside the tank.
- Do not use without dust bag or motor filter in place, or with a damaged filter.
- Use safety goggles to avoid the discharge air as particles in the air could cause eye damage.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Do not store flammable or corrosive fluids in toolbox.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS

CONSEILS DE SÉCURITÉ

Lors de l'utilisation d'un appareil électrique, quelques précautions élémentaires doivent être observées, incluant les suivantes:

LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER VOTRE ASPIRATEUR.

AVERTISSEMENT

Pour réduire le risque de feu, de choc électrique, ou de blessure:

- Ne pas utiliser sur des surfaces mouillées. Ne pas exposer à la pluie. Ranger à l'intérieur, dans un endroit frais et sec.
- **Fermez le commutateur et débranchez l'appareil lorsque vous ne l'utilisez pas ou avant le nettoyage ou l'entretien.**
- Ne permettez pas qu'il soit utilisé comme jouet. Une attention particulière est nécessaire lorsque utilisé par ou près d'un enfant.
- Suivez les recommandations d'utilisation de ce manuel. Utilisez uniquement les accessoires recommandés par le fabricant.
- Utiliser uniquement avec les cordons électriques qui accompagnent l'appareil.
- Ne pas utiliser si le cordon ou la fiche sont endommagés. Si l'aspirateur ne fonctionne pas comme il le devrait, s'il a été échappé, s'il est endommagé, s'il a été laissé à l'extérieur ou échappé dans l'eau, retournez-le à un centre de service avant d'utiliser.
- Ne pas le tirer ou le transporter par le cordon, ne pas utiliser le cordon en guise de poignée. Ne pas fermer une porte sur le cordon ou tirer le cordon sur des coins ou bordures pointus. Ne pas circuler sur le cordon avec l'aspirateur. Tenir le cordon à distance des surfaces chauffantes.
- Brancher uniquement à une prise correctement mise au sol. (Voir les Instructions concernant la mise à la terre.)
- Ne pas dépasser l'ampérage de l'ensemble de cordons électriques (13 amps). Aspirateur (6 amps), et accessoire (maximum de 7 amps se l'aspirateur est en marche).
- Ne pas utiliser des rallonges ou des prises qui n'ont pas de capacité suffisante pour transporter le courant.
- Fermer tous les contrôles avant de débrancher.
- Ne pas débrancher en tirant sur le cordon. Pour débrancher, tenez la fiche et non le cordon.
- Ne pas manipuler la fiche ou l'aspirateur avec les mains mouillées.
- Couvrir le récipient lorsque l'appareil n'est pas en marche.
- Ne pas rien insérer dans les ouvertures. Ne pas utiliser si des ouvertures sont bloquées; assurez-vous qu'elles soient dégagées de poussière, mousse, cheveux ou toute autre chose qui pourrait réduire le passage de l'air.
- Cet aspirateur crée de la succion. Maintenir les cheveux, les habits flottants, les doigts et tout autre partie du corps loin des ouvertures et des pièces mobiles.
- Ne rien ramasser qui brûle ou fume, tel que cigarettes, allumettes ou des cendres chaudes provenant d'une cheminée ou d'un barbecue. Les étincelles ou les charbons ardents pourraient mettre le feu aux déchets à l'intérieur du réservoir.
- Ne pas utiliser sans que le sac à poussière ou le filtre du moteur ne soient en place. Ne pas utiliser avec un filtre endommagé.
- Utiliser des lunettes protectrices pour éviter l'air de décharge puisque des grains dans l'air pourraient endommager les yeux.
- Portez une attention particulière lorsque vous nettoyez les escaliers.
- Ne pas utiliser pour ramasser des liquides inflammables ou combustibles comme de l'essence: Ne pas utiliser dans les endroits où ces liquides pourraient être présents.
- Entreposez votre aspirateur à l'intérieur dans un endroit propre et sec.
- Maintenez un bon éclairage à l'endroit où vous travaillez.
- Débrancher les appareils électrique avant de les balayer.

CONSERVEZ CES INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER

Improper connection of an equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance. If it will not fit the outlet, have proper outlet installed by a qualified technician.

This appliance is for use on a nominal 120 volt circuit and has a grounding plug that looks like the plug illustrated in Figure A. A temporary adapter which looks like the adapter illustrated in Figure B may be used to connect this plug to a two-pole receptacle, as shown, if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet, Figure A, can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

INSTRUCTIONS VISANT LA MISE À TERRE


Cet appareil doit être mis à la terre. En cas défaillance ou de panne éventuelles, la mise à la terre fournit au courant un chemin de moindre résistance qui réduit le risque de choc électrique. Cet appareil est pourvu d'un cordon muni d'un conducteur de terre et d'une fiche avec broche de terre. La fiche doit être branchée dans une prise appropriée correctement installée et mise à la terre conformément aux règlements et ordonnances municipaux.

AVERTISSEMENT

Un conducteur de terre mal raccordé peut entraîner un risque de choc électrique. Consulter un électricien ou un technicien d'entretien qualifié si vous n'êtes pas certain que la prise est correctement mise à la terre. Ne pas modifier la fiche fournie avec l'appareil-si elle ne peut être insérée dans la prise, faire installer une prise adéquate par un électricien qualifié.

Note. Au Canada, l'utilisation d'un adaptateur temporaire n'est pas autorisée par le Code canadien de l'électricité.

Cet appareil est destiné à un circuit de 120V et est muni d'une fiche de mise à la terre semblable à celle illustrée par le Figure A. S'assurer que l'appareil est branché à une prise de courant ayant la même configuration que la fiche. Aucun adaptateur ne devrait être utilisé avec cet appareil.

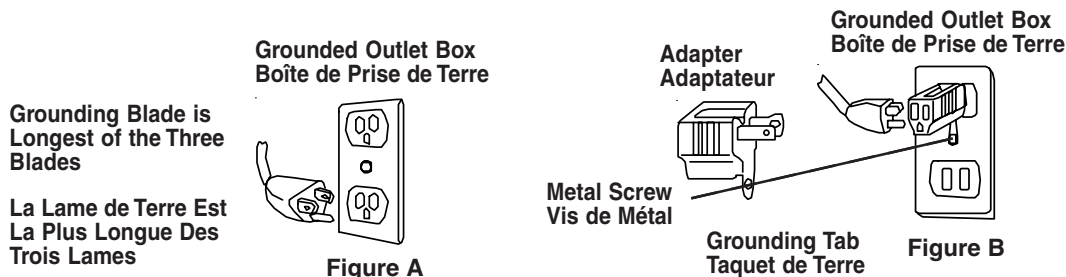

GENERAL INFORMATION

The cleaner is designed to pick up dirt and dust particles. Avoid picking up hard or sharp objects with the cleaner to prevent hose clogs.

If an extension cord is used it must be 3 wire, grounded type and marked SJTW (suitable for outdoor use) 16 AWG minimum.

Service Information

The instructions in this booklet serve as a guide to routine maintenance. For additional service information telephone our toll free number for the nearest Eureka Authorized Warranty Station. **You should know the model, type and serial numbers when you call:**

USA: 1-800-282-2886
Mexico: 5670-6169
Canada: 1-800-282-2886

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main Street, Bloomington, Illinois 61701, USA. In Canada write to The Eureka Company, 866 Langs Drive, Cambridge, Ontario N3H 2N7. Refer to The Eureka Limited Warranty for complete service information.



DO NOT OIL the motor at any time. The bearings are permanently lubricated and sealed.

Rating Plate

The model, type, and serial numbers are indicated on the rating plate located on the top of the motor compartment inside the toolbox. For prompt and complete service information, always refer to these numbers when inquiring about service.


Model & Type _____

Serial No. _____

MODEL	TYPE	SERIAL NO.
VOLTS	AMPS.	HERTZ
SERVICE INFORMATION: 1-800-282-2886		
THE EUREKA COMPANY		
BLOOMINGTON, ILLINOIS 61701		

Thermal Cut Off


This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts off, push the on/off switch off (O) and unplug the cleaner. Check the cleaner for a possible source of overheating such as a full dust bag, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minute period, plug the cleaner back in and push the on/off switch on (I). If the cleaner still does not run, then take it to a Eureka Authorized Service Center for repair.

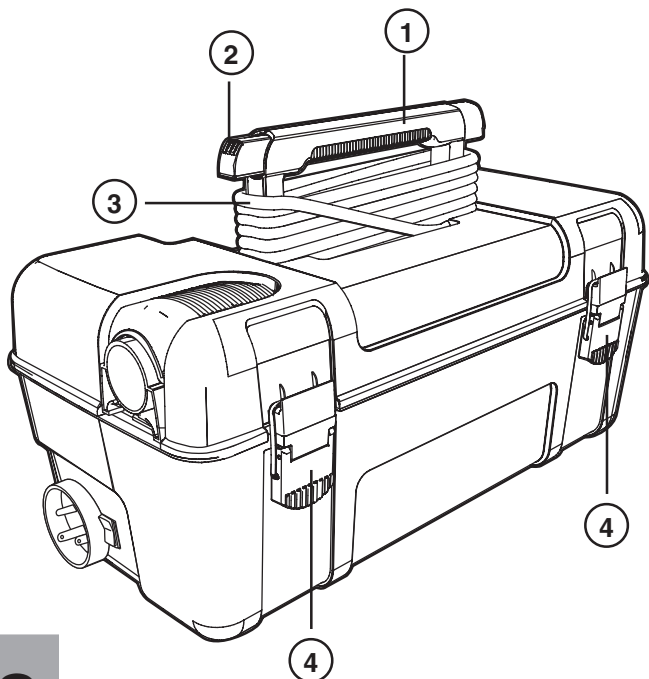

- ① **Carrying Handle.** Use this handle to carry unit from one place to another. The handle can also be used for electrical cord storage.
- ② **Quick Cord Release Button.** Press in on button for quick access to electrical cord.
- ③ **Electrical Cord.** The electrical cord can be stored wrapped around the handle or inside the tool box compartment.

DANGER: Electrical cords can be hazardous. Please read safety instructions on electrical cord.

- ④ **Tool Box Lid Latches (2).** Lift up on latch to release the tool box lid.

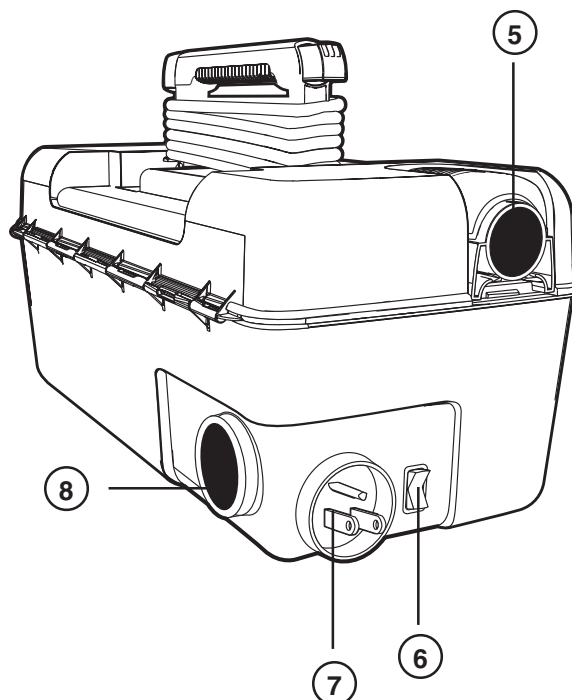



- ⑤ **Suction Inlet.** Insert the end of the hose in the inlet to use vacuum function.
- ⑥ **On/Off Switch.** International symbol **I** means On, International symbol **O** means Off.
- ⑦ **Electrical Socket.** The large end of the electrical cord plugs into this socket, the other end into a wall outlet.
- ⑧ **Blower Port.** Insert the end of the hose into the blower port to use the blower function.

Helpful Information:

Listen to your cleaner. If you notice a change in the sound of the motor or a change in performance, it could simply indicate a common usage or maintenance issue. Such as, possible blockage in hose, dirty filter or full dust bag. These are all easy to fix and the instructions are included in this owner's guide. Becoming familiar with the information in this guide will help you to get the best possible performance from your new cleaner for many years to come.

Electrical Cord - For shipping purposes, the electrical cord is stored inside the tool box . Open lid latches, lift tool tray up, to remove electrical cord.

LiftTool Tray

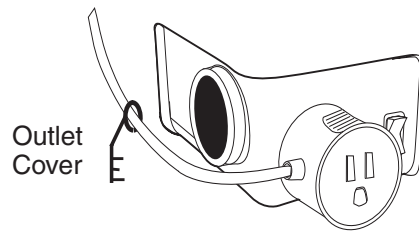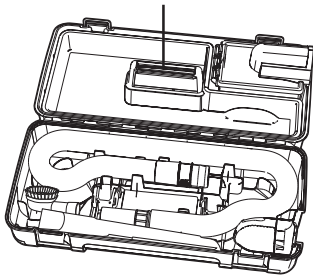


Plug round end of electrical cord into the tool box, as shown above. Plug the other end of electrical cord into electric socket.


The electrical plug has been designed so an electric tool or appliance can be plugged directly into it.

Cover unused receptacle when not in use with outlet cover (attached to cord as shown).

ON/OFF Switch. International symbol **I** means On, International symbol **O** means Off.

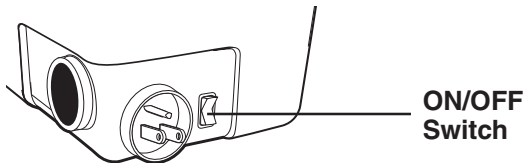


Suction Inlet. Insert larger end of hose into suction inlet to use as a vacuum.

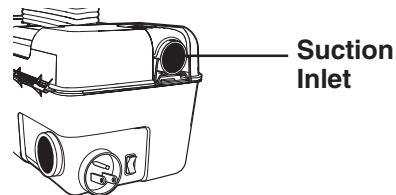


NOTE: Always wear safety goggles (not provided). Never point blower toward people, animals or objects that may be injured/damaged by flying debris. These units must NOT be used to power a paint sprayer or to supply air to any other sprayer.

Blower Port. Insert larger end of hose into the blower port to use as a blower.

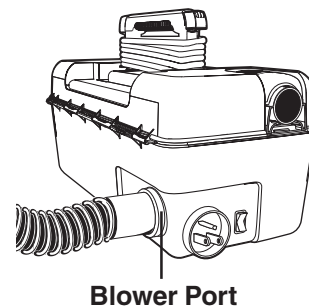


Accessories - The accessories are stored on the inside of the tool box lid. There are diagrams on the inside of the lid to help with placing them back in the correct location.

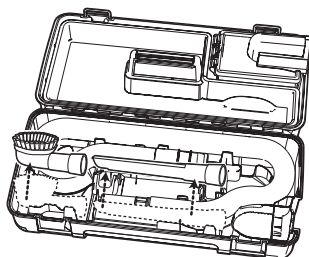

1. To use accessories remove hose from top of the lid by lifting up.
2. Place desired accessory onto end of hose or crevice wand.

Extension Cords

NOTE: If an extension cord is used, make sure the plug connection does not come into contact with any liquid. Use a grounded extension cord with 3-prong plug and 3-pole receptacle; 16 gauge, SJTW-A type. Loop the cords to prevent unplugging.

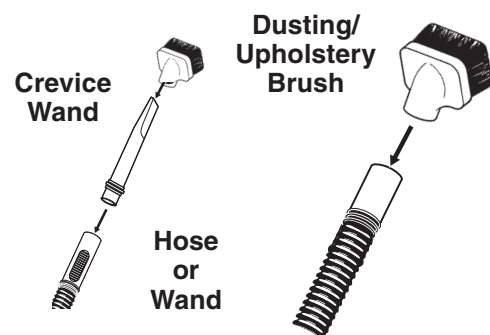

Dusting/Upholstery Brush is for furniture, blinds, books, lamp shades, shelves, curtains, draperies, cushions and fabrics.

Crevice Wand cleans corners, stairs, baseboards, and between cushions.


The instructions in this booklet serve as a guide to routine maintenance. To avoid unnecessary service calls, check the dust Bag and filter often. We suggest emptying the dust bag after every use.

NOTE: When vacuuming carpet fresheners or cleaners, powder, plaster dust, or similar fine substances, the dust bag and filter will require more frequent maintenance.


CAUTION: Turn off the switch and unplug the electrical cord before changing the dust bag or filter. Never operate the vacuum cleaner without the dust bag or filter in place.

Emptying the Dust Bag and Installing or Cleaning the Pre-Motor Filter:

- 1 Open the tool box. Lift up on the dust bag compartment lid.

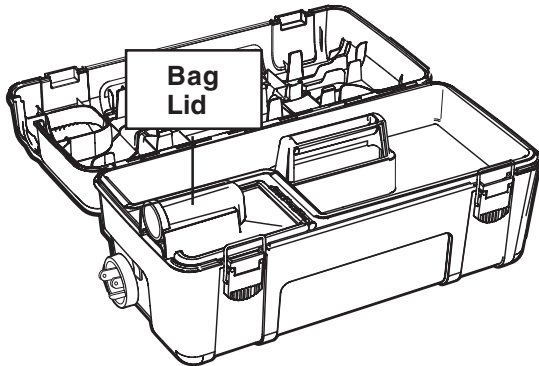


- 2 Lift the dust bag out of compartment. While the dust bag is out of the cleaner, check the pre-motor filter to see if it needs to be cleaned. Pull it up out of the two brackets holding it in place.

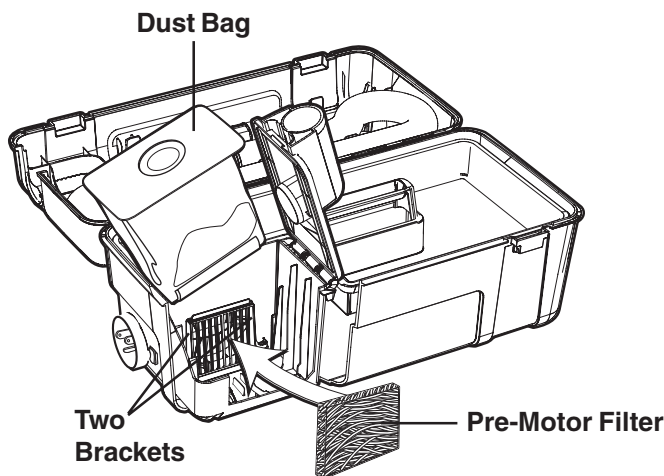

- 3 To clean the pre-motor filter, you can vacuum it with another vacuum or wash it under running water. **The filter must be completely dry before reinstalling in the cleaner.**

- 4 To empty cloth dust bag, hold dust bag over a waste container and slide the bottom clamp off the dust bag. Shake debris into waste container. Reposition plastic clamp at base of dust bag.

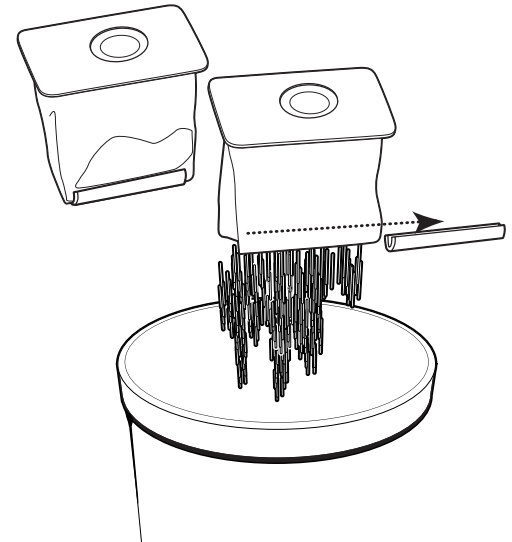

Reinstalling the Pre-Motor Filter and Dust Bag:

- 1 To replace the pre-motor filter, slide it down between the two brackets in the dust bag compartment. Make sure the filter is pushed all the way down to the bottom of the brackets.
- 2 Put the dust bag back in the bag compartment and close the bag compartment lid.

Storage:

Store indoors in a cool, dry place. Do not expose to rain.

NOTE: Turn off the switch and unplug the electrical cord before servicing.

PROBLEM	CAUSE	SOLUTION
Motor will not start.	<input checked="" type="checkbox"/> Electric Plug	<input type="checkbox"/> Push plug securely into outlet, at each end. <input type="checkbox"/> Try another outlet. <input type="checkbox"/> Check circuit breaker.
Motor suddenly stops.	<input checked="" type="checkbox"/> Thermal Cut Off	<input type="checkbox"/> Page 5.
Does not pick up debris.	<input checked="" type="checkbox"/> Filters <input checked="" type="checkbox"/> Dust Bag <input checked="" type="checkbox"/> Hose	<input type="checkbox"/> Clean or replace the filters. Hint: If picking up fine dust, the filters may <u>not</u> look dirty but a fine substance tends to reduce suction when it blocks the airflow through the filter(s). <input type="checkbox"/> Empty dust bag. <input type="checkbox"/> Be sure hose is secure in suction inlet. <input type="checkbox"/> Remove any blockages from the hose that restrict the airflow.
Missing parts.		<input type="checkbox"/> Call 1-800-438-7352 between 8:00 a.m. and 4:45 p.m., central standard time, Monday through Friday. Know the model and serial numbers when you call.
Questions?		<input type="checkbox"/> Call 1-800-282-2886 between 8 a.m. to 7:30 p.m., Central Standard Time, Monday through Friday, 10:00 a.m. to 6:30 p.m. Saturday. Know the model and serial numbers when you call.

ORDER FORM

(Not applicable in Canada)

S O L D T O	Name		
	Address (street address needed for UPS)		
	City	State	Zip
	Telephone (Day)	(Eve)	(Fax)

SHIP TO	Name		
	Address (street address needed for UPS)		
	City	State	Zip
	Telephone (Day)	(Eve)	(Fax)

IMPORTANT:

Be sure to include your model, type, and serial numbers. These numbers may be found on the rating plate.

Model Number:

Type:

Serial Number:



By Phone
1-800-
438-7352*

HOURS:
Call between 8 a.m.
and 4:45 p.m.,
central standard time
Monday through Friday.

**By FAX
1-309-
823-5789**

To Answer Problems
or Questions for U.S.A.
and Canada call:

1-800-282-2886*

8 a.m. - 7:30 p.m.
(CST)

Monday - Friday and
10 a.m. - 6:30 p.m.

(CST)
Saturday

*En México llame al

5670-6169



**Simply fill out
this Order Form.
Please be sure to
include day
and evening
phone numbers.**

ON-LINE

~~www.eureka.com~~

Method of payment (no C.O.D. orders)

☐ **Check or money order** (payable to **The Eureka Company**). Do not send currency.☐ **Visa** (16 digits)




 
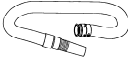

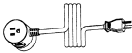
☐ DiscoverCard (15 digits)

☐ MasterCard (13 digits)

☐ Amer. Express (15 digits)

[illegible]

Signature (full name as shown on acct.) _____

Genuine Eureka Bags and Filters		Part No.	Qty.	Price (USD)	Total
	Cloth Dust Bag	72553		14.99	
	Motor Filter	72552		.99	
Accessories/Tools					
	Crevice Wand	72575-355N		4.99	
	Dusting Brush	61126		2.09	
	Hose Assembly	72571		12.99	
	Tool Tray	71915-119N		6.99	
	Supply Cord	72568		8.99	

Total (prices subject to change without notice)	
Tax (add state tax & local taxes as required by law)	
Postage & Handling Charge (within U.S.A.)	\$5.50
TOTAL ENCLOSED	

THE EUREKA LIMITED WARRANTY

What This Warranty Covers

Your Eureka cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of one year. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

What This Warranty Does Not Cover

- Parts of the cleaner that require replacement under normal use, such as disposable dust bags, fans, filters, drive belts, light bulbs, and brush roll bristles
- Damages or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka parts.

What The Eureka Company Will Do

The Eureka Company will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty. As a matter of warranty policy, the Eureka Company will not refund the consumer's purchase price.

Warranty Registration

Please fill out and return the warranty registration card accompanying your cleaner.

Obtaining Warranty Service

To obtain warranty service you must return the defective cleaner or cleaner part along with proof of purchase to any Eureka Authorized Warranty Station. You will find the nearest location in the Yellow Pages, under "Vacuum Cleaners—Service and Repair." Be certain that the Warranty Station is "Eureka Authorized."

For the location of the nearest Eureka Authorized Warranty Station or for service information, telephone toll free:

USA: 1-800-282-2886

Mexico: 5670-6169

Canada: 1-800-282-2886

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main Street, Bloomington, Illinois 61701, USA. In Canada write to The Eureka Company, 866 Langs Drive, Cambridge, Ontario N3H 2N7.

If it is necessary to ship the cleaner outside your community to obtain warranty repair, you must pay the shipping charges to the Eureka Authorized Warranty Station. Return shipping charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type, and serial number from the data plate on the cleaner.

Further Limitations and Exclusions

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Eureka be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary by state.

GENUINE
EUREKA PRODUCT

Questions & Answers about Genuine Eureka Products

Q: Why should I use only Genuine Eureka paper bags, belts, and parts in my Eureka vacuum cleaner?

A: Using Genuine Eureka Products, which are made to our exacting specifications and engineered with emphasis on quality, performance, and customer satisfaction, ensures the long life and cleaning efficiency of your vacuum cleaner. Overall, this saves you money and helps to keep your home clean.

Q: How can I be sure I am using only genuine Eureka products in my vacuum cleaner?

A: Typically, packaged products and paper bags can be identified by a "Genuine Eureka Product" symbol (see illustration above). For further identification assistance, you may call our toll-free number, 1-800-282-2886, for the location of a nearby Eureka Authorized Warranty Station.

Q: Are there any differences between "made to fit" or "imitation" and Genuine Eureka paper bags, belts, and parts?

A: Yes, there are some very important differences in materials, quality, and reliability. Many customers have mistakenly purchased "imitation" paper bags and parts while thinking they purchased genuine. Unfortunately, many of these customers discovered the differences after they experienced related difficulties.

For Genuine Eureka Value, Accept No Imitations!
THE EUREKA COMPANY

Bloomington, Illinois 61701

Household Warranty
abs 190A (11/02)